




MC-100
user manual

Charge the Pocket Multi Charger via AC source


1. Fold-away out the 2-pin plug from the slot.



2. Plug into wall outlet then the red LED will light up for charging.

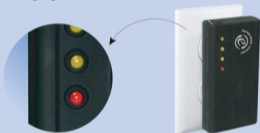

3. When the Pocket Multi Charger is fully charged, the 3 yellow LEDs will light up, then unplug the Pocket Multi Charger from the wall outlet.

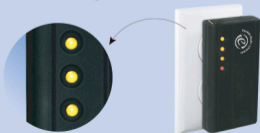

Charge the Pocket Multi Charger via DC source

1. Plug of the DC INPUT USB tip into the Pocket Multi Charger "USB" port.
2. Then connect DC INPUT USB end to the USB charging cable.



3. Then plug into the USB power source of the devices such as notebook computer, or car etc.



4. When the Pocket Multi Charger is fully charged, the 3 yellow LEDs will light up, then unplug the Pocket Multi Charger from the USB power source.



Charging electronic devices

1. Plug the USB charging cable into the Pocket Multi Charger "USB" port.
2. Select the appropriate connector tip and attach it to the USB charging cable.



3. Plug the correct connector tip into the power jack of the electronic device then the yellow LED will light up.



4. The 3 yellow LEDs light up, it indicates the Pocket Multi Charger is fully power. The yellow LED will light off one by one to indicate the Pocket Multi Charger residual power status. If all yellow LEDs light off, the Pocket Multi Charger power is exhausting.



Technical & Support

Size • 91 (L) x 48 (W) x 16.5 (D) mm

Weight • Approx. 110g

Technical • Built-in AC-DC adaptor

• Built-in Li-ion battery

• 4 LED indicator lights

Accessories • USB charging cable (retractable)

• USB car adaptor

• Connector tips x 7

For any 5V DC devices or a variety of mobile phones/gaming devices or digital cameras.

Connector Tips



iPhone/
iPod



LG



Mini
USB



Nokia
(2mm jack)



Samsung



Sony
Ericsson



Micro
USB

Pocket Multi Charger does not charge a connected device?

- Check the connection between the Pocket Multi Charger and the device.
- The voltage of the device may not correspond with that of the Pocket Multi Charger.
- Check that you are using the correct connector tip.

Safety Advice!

- To avoid risk of electric shock, unplug the Pocket Multi Charger from the AC power source and disconnect the devices first before cleaning or when not in use.
- Do NOT shake or drop the Pocket Multi Charger.
- Keep the Pocket Multi Charger away from children.

***Thank for your purchase and for using the
Pocket Multi Charger***



Pocket Multi Charger

Model : MC-100
Input : AC 100~240V 50/60Hz 0.1A
or USB DC 5V
Output : 5V \equiv 500mA
Capacity : 2500mAh
Standards : GB4943-2001

Note:

- Please do not open it due to high-voltage.
- Do not put it near fire and water.

Safety and protection:

- Charge protection
- Short-circuit protection
- Over-current protection
- Over-charge protection
- Over-discharge protection
- High temperature resistance



CE FCC CB

